

* Source Temp sensor can be mounted in either hot or cold depending upon application usage

Features

- LONMARK compliant with space-comfort controller functional profile (8502)
- Flow sensors can be installed in cold duct and hot duct or cold duct and discharge duct
- Operates dual cold/ dual hot sequence, when both supply ducts use same temperature air
- Application control of zone lighting reduces installation costs and provides energy savings
- Advanced PID control minimizes offset and maintains tight set point control
- Unique damper logic minimizes damper repositions extending life of actuators
- Standby mode enables energy savings during occupied hours for rooms that are not always used. When occupants are sensed the controller quickly responds to maintain comfort levels.
- Diversity control, through a demand limit input, maximizes comfort by maintaining even air distribution to all zones during morning warm-up or pre-cool operation.
- Conforms to the LONMARK interoperability guidelines, enabling information sharing with LONMARK products from other vendors.

Sequence of Operation

This application example describes the operation of the Predator VAV dual duct terminal unit controller with 2 inlet flow sensors and optional lighting control. The Predator monitors the room temperature, room setpoint, room override switch, and supply air flows. As the monitored conditions change, the control algorithm modulates the damper actuators and the perimeter heating valve to maintain the specified room setpoints. If lighting control is installed, the zone will be illuminated according to the current occupancy mode of the Predator controller.

Occupied Control

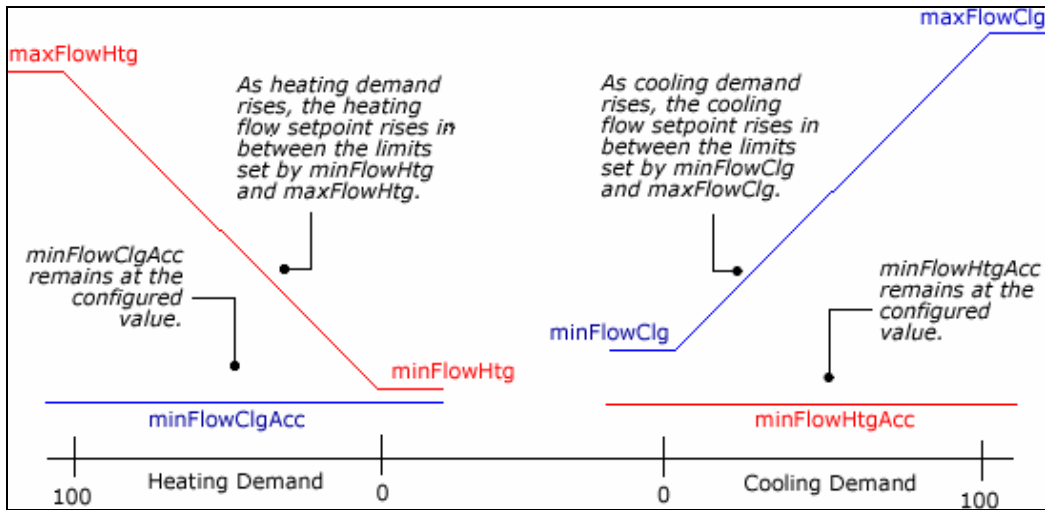


Diagram 1: Occupied Control

Cooling Mode

In occupied cooling mode, the Predator Controller controls the space to the occupied cooling temperature setpoint. A cooling demand PID resets the cold duct flow setpoint within a configurable range to maintain space temperature. The hot duct maintains a configurable accessory flow, which can be used for ventilation.

Heating Mode

In occupied heating mode, the Predator Controller controls the space to the occupied heating temperature setpoint. A heating demand PID resets the hot duct flow setpoint within a configurable range to maintain space temperature. The cold duct maintains a configurable accessory flow, which can be used for ventilation. The perimeter heating valve modulates as required to control the zone temperature. The airflow and perimeter heat can be configured to operate in sequence or unison.

Deadband

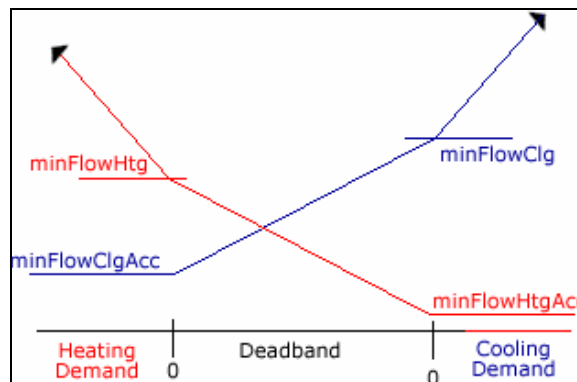


Diagram 2: Deadband Control

The operation of the application when the space temperature is between the heating and cooling temperature setpoints is configurable. By default, the controller performs a distinct switchover between minimum heating and minimum cooling conditions. If configured, the controller can perform a crossover process where the flow setpoints are gradually adjusted according to the space temperature between the heating and cooling setpoints.

Unoccupied Control

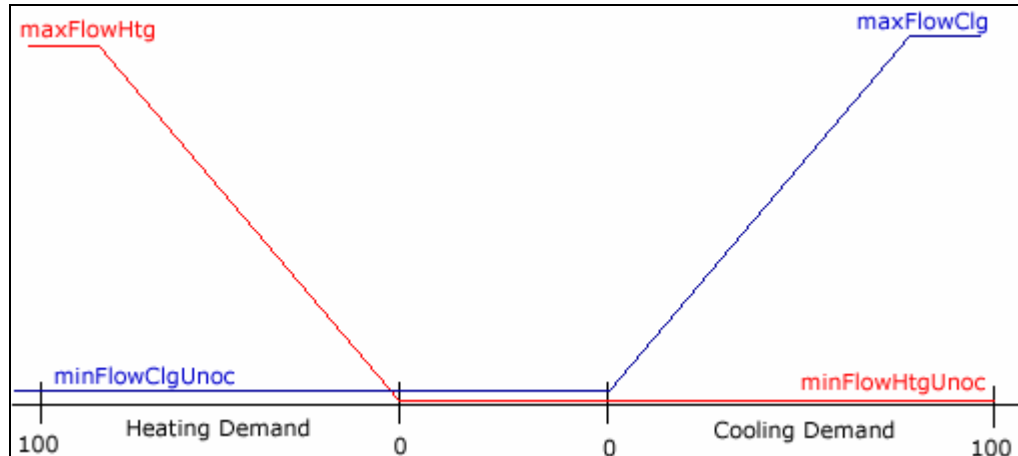


Diagram 3: Unoccupied Control

Cooling Mode

In unoccupied cooling mode, the Predator Controller controls the space to the unoccupied cooling temperature setpoint. A cooling demand PID resets the cold duct flow setpoint within a configurable unoccupied range to maintain space temperature. The hot duct maintains a configurable unoccupied flow.

Heating Mode

In unoccupied heating mode, the Predator Controller controls the space to the unoccupied heating temperature setpoint. A heating demand PID resets the hot duct flow setpoint within a configurable unoccupied range to maintain space temperature. The cold duct maintains a configurable unoccupied flow. The perimeter heating operation is configurable in unoccupied mode.

Standby Control

Spaces that are not occupied on a routine basis (conference rooms, etc.) can be placed into standby mode during normally scheduled occupancy times. This will save energy while still ensuring the comfort of the occupants.

Cooling Mode

The Predator Controller uses the same flow operation as unoccupied mode but controls the space temperature to the standby cooling setpoint. Once occupancy is detected, control reverts to the Occupied Mode as detailed above.

Heating Mode

The Predator Controller uses the same flow operation as unoccupied mode but controls the space temperature to the standby heating setpoint. The perimeter heating valve modulates as required to control the zone temperature. Once occupancy is detected, control reverts to the Occupied Mode as detailed above.

Dual Cold

In this mode, the air handler supplies both ducts with cold air. If the dual supply sequence is configured for series operation, the cold duct will supply air until it reaches its maximum. If additional cooling is necessary, the hot duct will begin to supply air. If the dual supply sequence is configured for parallel operation, the flow setpoints for both ducts will increase at the same time.

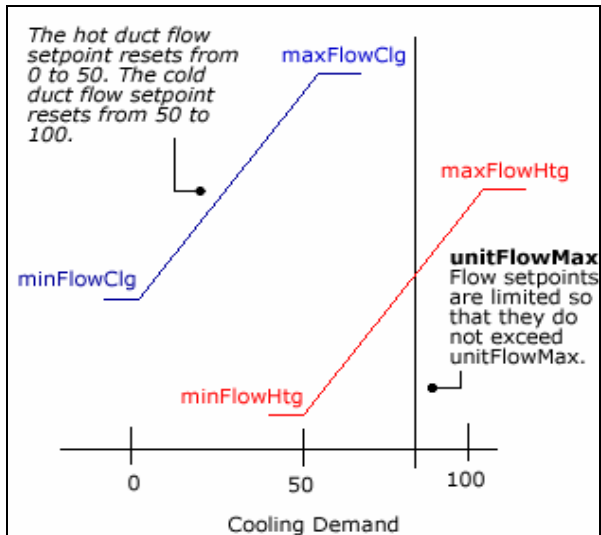


Diagram 4: Dual Cold Serial Flow Configuration

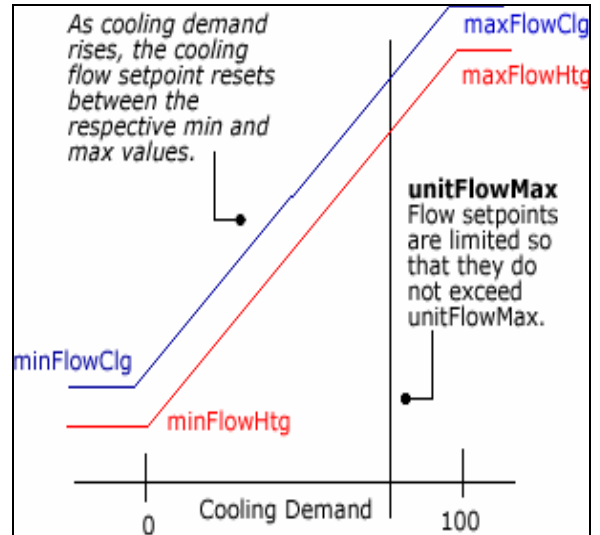


Diagram 5: Dual Cold Parallel Flow Configuration

Dual Hot

In this mode, the air handler supplies both ducts with hot air. If the dual supply sequence is configured for series operation, the hot duct will supply air until it reaches its maximum. If additional heating is necessary, the cold duct will begin to supply air. If the dual supply sequence is configured for parallel operation, the flow setpoints for both ducts will increase at the same time.

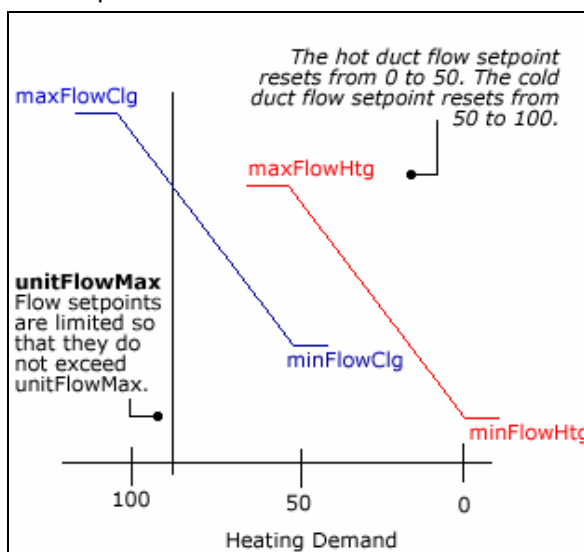


Diagram 6: Dual Hot Serial Flow Configuration

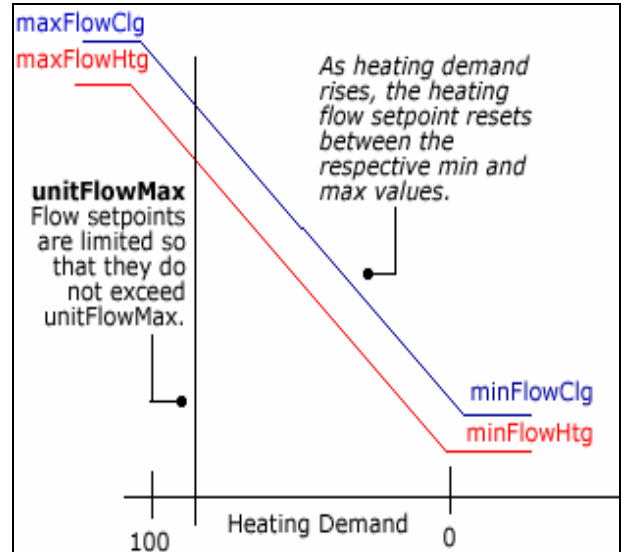


Diagram 7: Dual Hot Parallel Flow Configuration

Morning Warm-up/ Pre-Cool

In these pre-occupancy modes, the Predator Controller controls the space temperature to the occupied temperature setpoint using the unoccupied flow ranges. The perimeter heat operation is configurable in warmup mode.

Systems that have been sized for normal operation may sometimes fall below the total maximum flow needs during morning warm-up (or pre-cool) operation. The demand limit input provides for stable start up. Selection of the appropriate percentage will allow all boxes to provide air flow to the space in equal proportions, thus eliminating starvation of zones.

Off

In this mode, the dampers will close fully and lighting is off.

Test/ Calibrate

In the test mode, the controller will close both dampers fully and recalibrate the onboard airflow sensor. The response of the external sensor calibration is configurable. Once commanded to test mode, the controller remains in this mode (even if it is commanded to another mode) until the recalibration is complete. This process takes approximately two times the longest damper travel time.

Occupancy Control

Occupancy Mode

The Predator controller defaults to the occupied mode of operation. Upon receipt of the 4-state LonMark occupancy override (nviOccManCmd), the controller will switch to the appropriate mode of operation. A brief summary of each mode follows below:

LonMark		
<u>Occupancy State</u>	<u>Mode</u>	<u>Description</u>
(0)	Occupied	Controller in Occupied mode and uses Occupied setpoints.
(1)	Unoccupied	Controller in Unoccupied mode and uses Unoccupied setpoints.
(2)	Bypass	Controller temporarily in Occupied mode and uses Occupied setpoints until the Bypass Time elapses. Controller then returns to previous occupancy state.
(3)	Standby	Controller in Standby mode and uses Standby setpoints.

If a LonMark compatible occupancy schedule input (nviOccSchedule) is used, the controller will use the modes and setpoints as shown above. This will allow the Predator controller to utilize the scheduling properties of other devices on the LonTalk Network.

The occupancy signal could also come from a time clock, wall switch, or occupancy sensor physically wired to one of the inputs of the Predator controller (see figure 3). This occupancy signal could then be shared with other controllers via the LonTalk Network.

Bypass Mode

If enabled (through StatSwitchEn) and the Bypass button on the Predator room sensor is pressed, the controller will be placed in the Bypass mode for the amount of time specified by the controller's configuration parameters (default 60 min. – see Table 2). If the button is subsequently pressed again prior to the expiration of the Bypass time, the timer will reset to the initial value and resume counting down.

Priorities of Occupancy Control

Occupancy overrides are prioritized as follows (listed from highest to lowest):

- Wall Switch Input – Typically a physically operated switch used by occupants of room.
- Operator Command – A valid occupied command sent from system operator.
- Bypass Button – Button on Talon room sensor, also utilized by occupants of room.
- Occupancy Sensor – Locally connected or signal via the network.
- Occupancy Schedule – Sent from network.

Special Features

Room Temperature Sensor Sharing

The Predator Room Temperature Sensor may share its value with other controllers on the LonTalk network via a network binding. This is most commonly done when multiple terminal units serve a room or area.

Duct Temperature Sensor

An optional duct temperature sensor may be connected to the Predator controller for the purpose of monitoring the source temperature. This can be used to detect transitions from normal operation to dual cold/ dual hot operation. This is also useful for functions such as morning warmup, when you want to be sure warm air is being provided to the box, or as an aid in troubleshooting space comfort problems.

Wall Switch

An optional maintained contact wall switch may be used to control the occupancy mode of a room. Rooms with variable occupancy (conference rooms, etc.) can use this device to control occupancy and the lights with one switch.

Occupancy Sensor

Another useful option is to utilize an occupancy sensor to control the occupancy mode of the Predator controller. The function of this device would be similar to the wall switch above, but an occupant entering the room would not perform any manual action to put the room into occupied mode. If the schedule is in the occupied mode and the occupancy sensor does not detect people in the room, the room will go into the standby mode enabling energy savings while maintaining occupant comfort.

Lighting Control Relay

The Predator controller can selectively operate with maintained contacts or pulsed contacts to switch lighting control relays. This is useful in those instances where lighting control is desired, but a lighting control panel with a LonTalk interface is either not present or not feasible. Lighting is on in occupied and bypass modes and is off in unoccupied and standby modes.

Analog Damper Actuator

The standard application is setup to use a Siemens GDE or similar 3-point floating actuator for air volume control. Alternatively, A Siemens Open Air™ or similar damper actuator could be utilized if 0-10 VDC modulating control is desired.

Perimeter Heat

This application also supports the optional control of perimeter heat. The algorithm supports analog, 3-point floating, pulse width modulation, and on/off control of the perimeter heat. Perimeter heat operates independently of terminal airflow.

Hardware Map – Dual Duct VAV/CV

Termination Set	Element Name	I/O Type	Factory I/O Setting
StatTemp	statTemp	TEMP	SPACE_TEMP
StatSetpt	statSetpt	TEMP	SPACE_STPT_TEMP
StatOvr	statOvr	DI	STAT_SWITCH_DI
In1	in1	DI, TEMP	SOURCE_TEMP
In2	in2	DI, TEMP	SPARE1_TEMP
In3	in3	DI, PCT, TEMP	WALL_SWITCH_DI
In4	in4	DI, PCT, TEMP	OCC_SENSOR_DI
In5	in5	DI, PCT, TEMP	EXT_PRESSURE_PCT
In6	in6	PCT	ONBD_PRESSURE_PCT
OutA1	outA1	AO	FLOW_DMPR_AO
OutA2	outA2	AO	FLOW_DMPR2_AO
OutA3	outA3	AO	NOT AVAILABLE
OutD1	outD1	DO, FLT_MTR	FLOW_DMPR_FLT_MTR
OutD2	outD2	DO, FLT_MTR	FLOW_DMPR_FLT_MTR
OutD3	outD3	DO, FLT_MTR	FLOW2_DMPR_FLT_MTR
OutD4	outD4	DO, FLT_MTR	FLOW2_DMPR_FLT_MTR
OutD5	outD5	DO, FLT_MTR	PERIM_H_COIL_FLT_MTR
OutD6	outD6	DO, FLT_MTR	PERIM_H_COIL_FLT_MTR
OutD7	outD7	DO, FLT_MTR	OUT_UNUSED
OutD8	outD8	DO, FLT_MTR	SPC_LIGHTS_DO



Table 1. Hardware Map

In1 through In5 can be used for digital or analog inputs, as follows:


- In1 through In5 are dry contact inputs (with resistors)
- In1 and In2 also accept 100K ohm inputs
- In3, In4, and In5 also accept current (4-20 mA) and voltage (0-10 volt) inputs

A1 and A2 are 0-10 volt outputs only

Wiring Diagram

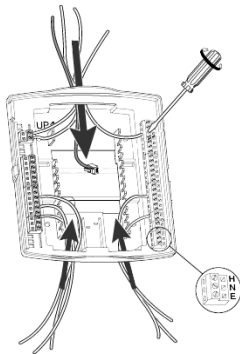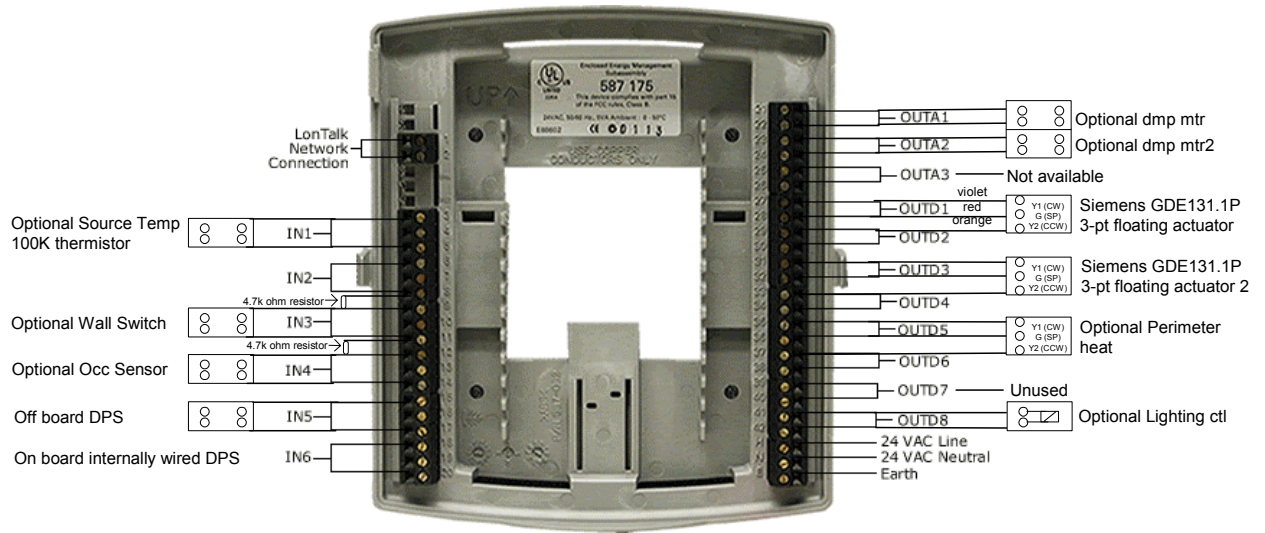

Note: Route wiring from either the bottom opening when using a J-box or from the base sides as shown in the picture when flat or din rail mounting.

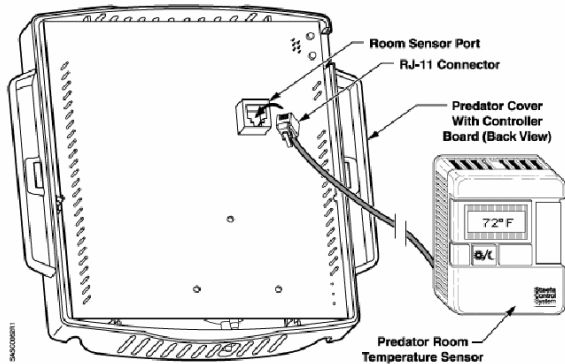

RJ-11 6-Pin Connector from the Predator Room Temperature Sensor to the Controller.

Wiring Recommendations:


IN and AO: 20 to 22 AWG
 DO: 18 to 22 AWG
 Power: 16 to 18 AWG
 LON Network: 22 AWG Level 4

Transformer Requirements:

Type: Class 2, 24 VAC, 50/60Hz

Figure 3. Predator Wiring Diagrams

Bill of Materials

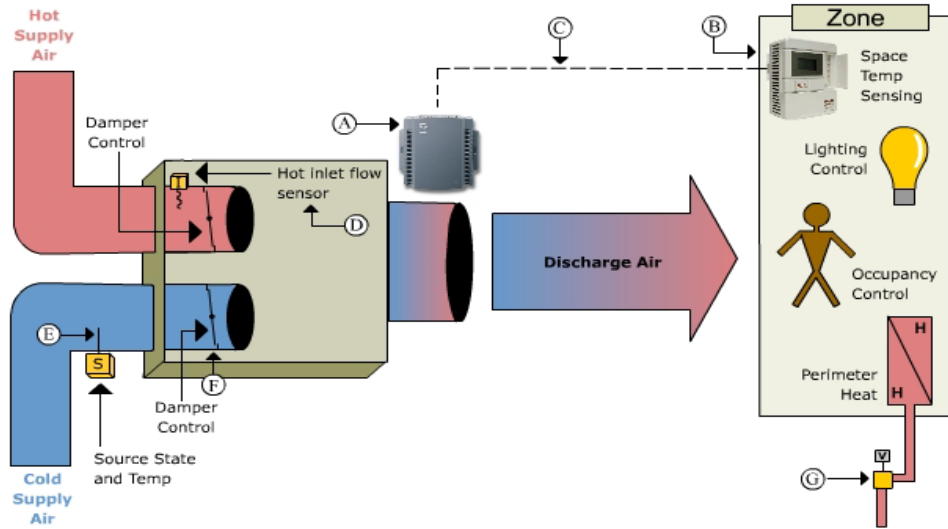

Tag	Description	Product #
A	Predator Dual Duct Controller 5IN, 8DO, 2AO, 1DP, 1RTS Predator Full Point Wiring Base	588-131 587-175
B	Predator Room Sensors: Sensing Only Override Setpoint Temperature Display Setpoint and Override Override and Temperature Display Setpoint and Temperature Display Setpoint, Override, and Temperature Display Predator Room Sensors <i>without</i> Logo's: No Logo Sensing Only No Logo Setpoint No Logo Setpoint and Override No Logo Setpoint, Override, and Temperature Display	587-180 587-181 587-182 587-183(1) 587-184 587-185(1) 587-186(1) 587-187(1) 587-550B 587-552B 587-554B 587-557B(1)
C	Predator Room Sensor 6-Conductor Plenum Rated Cables: 25 Foot 50 Foot 100 Foot Predator Room Sensor 4-Conductor (no network connection) Plenum Rated Cables: 25 Foot 50 Foot 100 Foot	588-100A 588-100B 588-100C 588-101A 588-101B 588-101C
D	Remote Mount Differential Pressure Sensors DP Sensor 0-2" w.c. DP Sensor 0-1" w.c. DP Sensor 0-0.5" w.c. DP Sensor 0-2" w.c. in conduit box DP Sensor 0-1" w.c. in conduit box DP Sensor 0-0.5" w.c. in conduit box Conduit Kit	590-502 590-503 590-504 590-507 590-508 590-509 590-511
E	Duct Temperature 100K thermistor 40 to 150F	535-741
F	Floating damper actuator 44 lb. In.	GDE.131.P
G	Floating valve actuator	SSB81U

Notes: (1) Sensor will display Fahrenheit or Celsius temperature

Configuration Tables

The application configuration tables below are for a typical two sensor dual duct box. JDE should be used to modify those items shown as optional or job specific.

Application Specific Parameters						
Application Component	VAV	CV	Configuration Item	Element	Factory Setting	Desired Setting
Core		X	cVTmpPriority		FALSE	False
	X		dualSupplySeq		SERIES	Job Specific
	X	X	flowVav	enable	TRUE	True for VAV
				dmdAtMin	0%	Job Specific
				dmdAtMax	100%	Job Specific
	X	X	setPnts	Unoccupied cooling setpoint	unoccupiedCool 28.0 °C	Job Specific
				Standby cooling setpoint	standbyCool 25.0 °C	Job Specific
				Occupied cooling setpoint	occupiedCool 23.0 °C	Job Specific
				Occupied heating setpoint	occupiedHeat 21.0 °C	Job Specific
				Standby heating setpoint	standbyHeat 19.0 °C	Job Specific
				Unoccupied heating setpoint	unoccupiedHeat 16.0 °C	Job Specific
	Cool/Heat Switch	X	htgClgSwit	dmdDeadband	1.00%	Job Specific
tmpDeadband				0.90°F (0.50°C)	Job Specific	
timeDelay				3.0 minutes	Job Specific	
Space Temperature	X	stptDialEn tempStptLim		FALSE	Job Specific	
			MinTemp	66.2°F (19.0°C)	Job Specific	
			MaxTemp	77.0°F(25.0°C)	Job Specific	
Damper Control		flowDmprMtr	TravelTime	90 seconds	Leave as default	
			Reverse	FALSE	Leave as default	
		flowDmprHtMtr	TravelTime	90 seconds	Leave as default	
			Reverse	FALSE	Leave as default	
Flow Control		airflowAuxLoc auxRecalEn dBandCrossOvr dpRangeAux		HOT_DUCT	Job Specific	
				ENABLE	Job Specific	
				FALSE	Job Specific	
				DP_2_INWC	Job Specific	
Lighting Control		lightsLag		10 minutes	Job Specific	
Occupancy Control		bypassTime occSensorEn statSwitchEn wallSwitchEn		60 minutes	Job Specific	
				FALSE	Job Specific	
				FALSE	Job Specific	
				FALSE	Job Specific	

Continued on next page

Application Specific Parameters Continued							
Application Component	VAV	CV	Configuration Item	Element	Factory Setting	Desired Setting	
Perimeter Heat			hStageCyc		10 minutes	Job Specific	
			htgSwitMeth		DEAD_BAND	Job Specific	
			numPerimStgs		0	Job Specific	
			perimHUnocc		MODULATE	Job Specific	
			perimHWrmup		CYCLE	Job Specific	
			perimHtgCoil	Enable		FALSE	Job Specific
				DmdAtMin		0%	Job Specific
				DmdAtMax		100%	Job Specific
			perimHtgMtr	TravelTime		125 seconds	Job Specific
				Reverse		FALSE	Job Specific
Source State and Temp			sourceTempLim	NeededToCool	64.4°F (18.0°C)	Job Specific	
				NeededToHeat	77.0°F (25.0°C)	Job Specific	
			sourceTempLoc		COLD_DUCT	Job Specific	
Spare Analog Temp							
Spare Digital Reading							
Spare Analog Percent							

Table 2. Two DPS Dual Duct Box Application Specific Parameters

Balancing Parameters					
VAV	CV	Configuration Parameter	Element	Factory Setting	Desired Setting
X	X	ductArea		1.0764 ft ² (0.1000 m ²)	Job Specific
X	X	ductAreaAux		1.0764 ft ² (0.1000 m ²)	Job Specific
X		maxFlowClg		2500 cfm (1180 L/s)	Job Specific
X		maxFlowHtg		850 cfm (401 L/s)	Job Specific
X	X	minFlowClg		449 cfm (212 L/s)	Job Specific
X		minFlowClgAcc		449 cfm (212 L/s)	Job Specific
X		minFlowCIUnoc		0 cfm (0 L/s)	Job Specific
X	X	minFlowHtg		600 cfm (283 L/s)	Job Specific
X		minFlowHtgAcc		0 cfm (0 L/s)	Job Specific
X		minFlowHtUnoc		0 cfm (0 L/s)	Job Specific
X	X	sensConstAux		1	Job Specific
X	X	sensConstVAV		1	Job Specific
	X	unitMaxFlow		2500 cfm (1180 L/s)	Job Specific
X		unitMinFlow		0 cfm (0 L/s)	Job Specific
	X	unitStbyFlow		1000 cfm (472 L/s)	Job Specific
	X	unitUnoccFlow		500 cfm (236 L/s)	Job Specific
X	X	nciPrOffset		0%	Job Specific
X	X	nciPrOffsetAux		0%	Job Specific

Table 3. Two DPS Dual Duct Box – Balancing Parameters

Tuning Parameters			
Configuration Parameter	Element	Factory Setting	Desired Setting
clgDmdCtrB	Pb	(5.00°F) 2.78°C	Job Specific
	Ti	2000 sec	Job Specific
	Td	0 sec	Job Specific
htgDmdCtrB	Pb	(10.0°F) 5.56°C	Job Specific
	Ti	1000 sec	Job Specific
	Td	0 sec	Job Specific
trmFlowCtrB	Pb	4	Job Specific
	Ti	12 sec	Job Specific
	Td	0 sec	Job Specific
trmFlowHtCtrB	Pb	4	Job Specific
	Ti	12 sec	Job Specific
	Td	0 sec	Job Specific

Table 4. Two DPS Dual Duct Box – Tuning Parameters

Control Mode Interaction Table –Dual Duct VAV with Two DPS

Device	Cool		Heat		Morning Warmup	Precool	Dual Cold*		Dual Hot		Off
	Occ	Unoc	Occ	Unoc	Unoc	Unoc	Occ	Unoc	Occ	Unoc	
Cold Flow Stpt	Cool Loop	Cool Loop	Constant	Constant	Constant	Cool Loop	Cool Loop	Cool Loop	Heat Loop	Heat Loop	0 lps
Hot Flow Stpt	Constant	Constant	Heat Loop	Heat Loop	Heat Loop	Constant	Cool Loop	Cool Loop	Heat Loop	Heat Loop	0 lps
Perimeter Valve	Closed	Closed	Mod	Config	Config	Close	Mod	Config	Mod	Config	Close
Perimeter Stages	Off	Off	Stage	Config	Config	Off	Stage	Config	Stage	Config	Off
Cold Flow Limits	MaxClg MinClg	MaxClg MinClgUnoc	ClgAcc	MinClgUnoc	MinClgUnoc	MaxClg MinClgUnoc	MaxClg MinClg	MaxClg MinClgUnoc	MaxClg MinClg	MaxClg MinClgUnoc	0 lps 0 lps
Hot Flow Limits	HtgAcc	MinHtgUnoc	MaxHtg MinHtg	MaxHtg MinHtgUnoc	MaxHtg MinHtgUnoc	MinHtgUnoc	MaxHtg MinHtg	MaxHtg MinHtgUnoc	MaxHtg MinHtg	MaxHtg MinHtgUnoc	0 lps 0 lps

Color Key: Red = OFF (not used); Green = Active (fixed in application); Yellow = Selectable (configurable)

* Heat is only available in dual cold operation if perimeter heat is enabled.

NOTE: In TEST or CALIBRATE, perimeter heat will continue to operate based on the previous mode of the controller.

Control Mode Interaction Table –Dual Duct CV with Two DPS

	Cool			Heat**			Morning Warmup	PreCool	Off
	Occ	Stby	Unocc	Occ	Stby	Unocc	Unocc	Unocc	
Cold Flow Stpt	Cool Loop	Cool Loop	Cool Loop	Constant Min	Constant Min	Constant Min	Cool Loop	Cool Loop	0 lps
Hot Flow Stpt*	Flow Loop	Flow Loop	Flow Loop	Constant Max	Constant Max	Constant Max	Flow Loop	Flow Loop	0 lps
Perimeter Valve	Closed	Closed	Closed	Mod	Mod	Config	Config	Closed	Closed
Perimeter Stages**	Off	Off	Off	Stage	Stage	Config	Config	Off	Off
CV Max	UnitMax	MaxStby	MaxUnoc	UnitMax	MaxStby	MaxUnoc	MaxStby	MaxStby	0 lps
Cold Min	MinClg	MinClgUnoc	MinClgUnoc	MinClg	MinClgUnoc	MinClgUnoc	MinClgUnoc	MinClgUnoc	0 lps
Hot Min	MinHtg	MinHtgUnoc	MinHtgUnoc	MinHtg	MinHtgUnoc	MinHtgUnoc	MinHtgUnoc	MinHtgUnoc	0 lps

Color Key: Red = OFF (not used); Green = Active (fixed in application); Yellow = Selectable (configurable)

* If application is configured for temperature priority, the hot damper will run based on the cooling loop.

** Heat is available only if perimeter heat is enabled.

NOTE: In TEST or CALIBRATE, perimeter heat will continue to operate based on the previous mode of the controller.

Notice: Information in this document is based on specifications believed correct at the time of publication. The right is reserved to make changes as design improvements are introduced.

Credits: *Staefa Control System*, *Raptor*, *Predator*, and *TALON* are trademarks of Siemens Building Technologies, Inc. *Niagara Framework* is a registered trademark of Tridium, Inc. Other products and company names herein may be the trademarks of their respective owners.



Siemens Building Technologies, Inc.
HVAC Products
1000 Deerfield Parkway
Buffalo Grove, Illinois 60089
Phone 847-215-1000
www.staefa.com

Copyright 2001 by Siemens Building Technologies, Inc.



LONMARK®
SPONSOR